
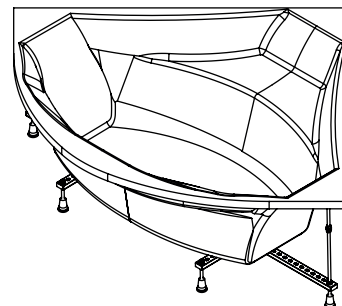



polysan

ROSANA

GB Mounting instructions
 CZ Montážní návod
 H Szerelési utasítás
 RU Инструкция по монтажу
 D/A Montageanleitung
 PL Instrukcja montażu

RO Instrucțiuni de montaj
 ES Manual de instrucciones
 FR Notice de montage
 NL Montage instructie
 LT Montavimo instrukcija
 SK Montážny návod

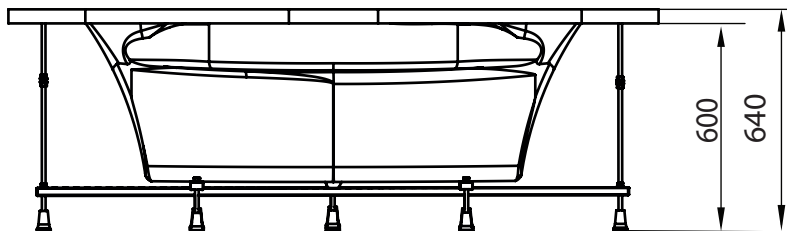

01 2x M12x20 

02 27x M12 

03 3x M12 

04 15x 6x20 

05 15x M10/19 

06 20x M12/23 

07 1x M12/36 

08 8x 

09 8x 

10 3x 


11 7x 


12 2x 600 


13 1x 390 


14 4x 130 

15 1x 100 

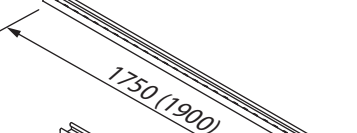16 1x  1750 (1900)

17 1x  570 (630)


18 2x  630

19 8x 8x40 

20 2x M10/23 




21 2x M10 


22 4x 

23 2x 



24 2x M10 


25 8x 4x40 

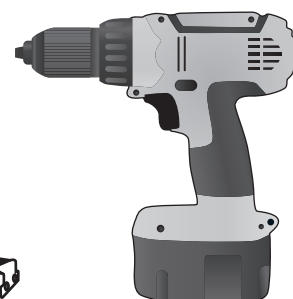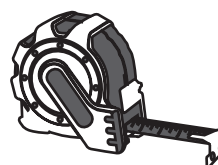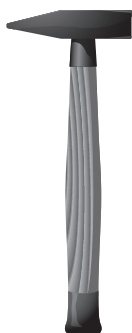

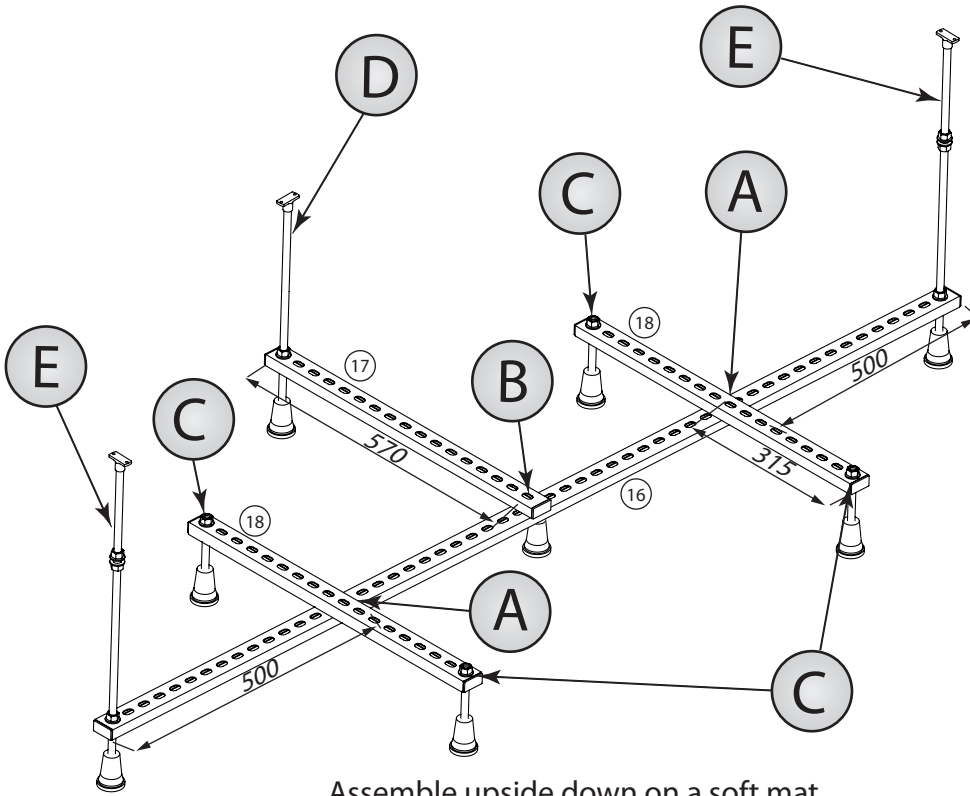

Assemble upside down on a soft mat.

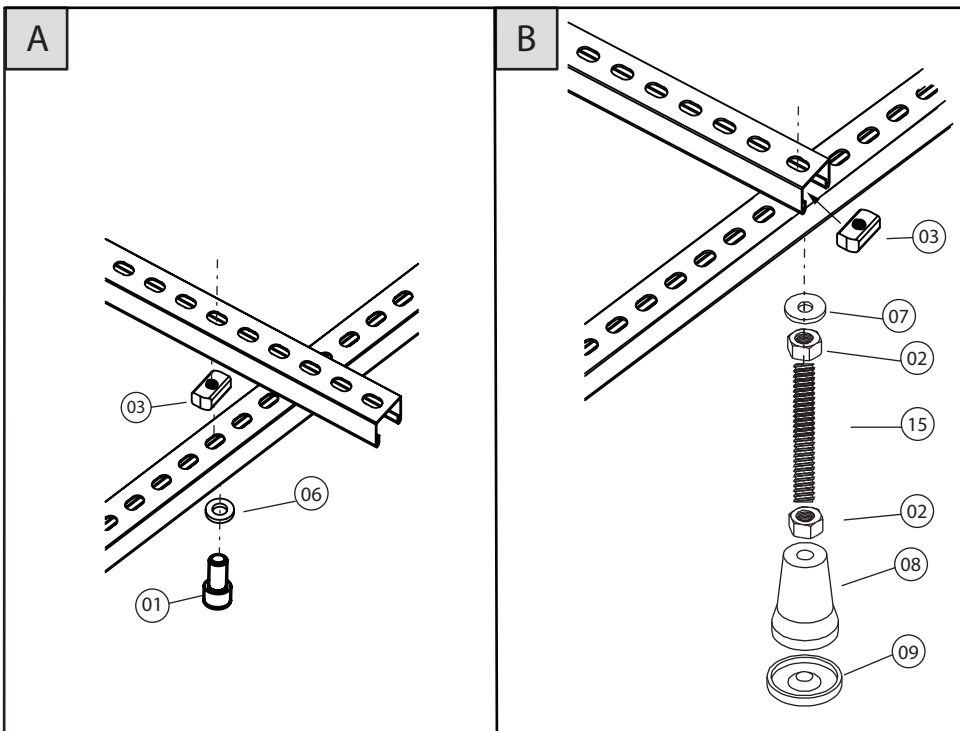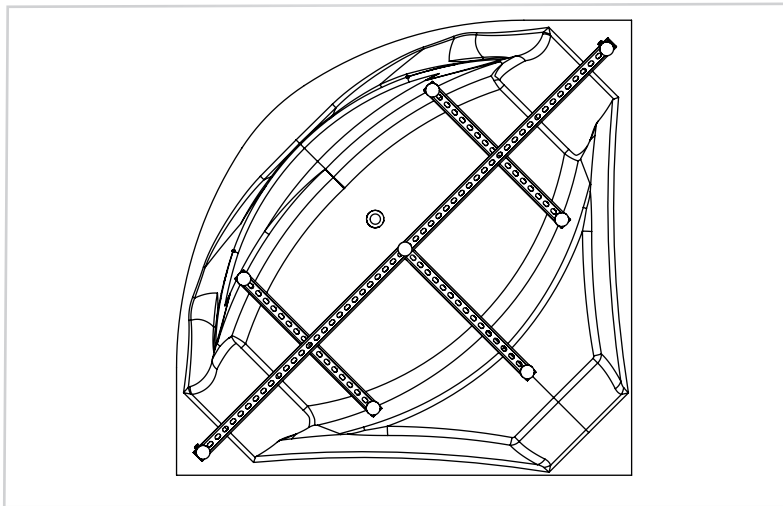

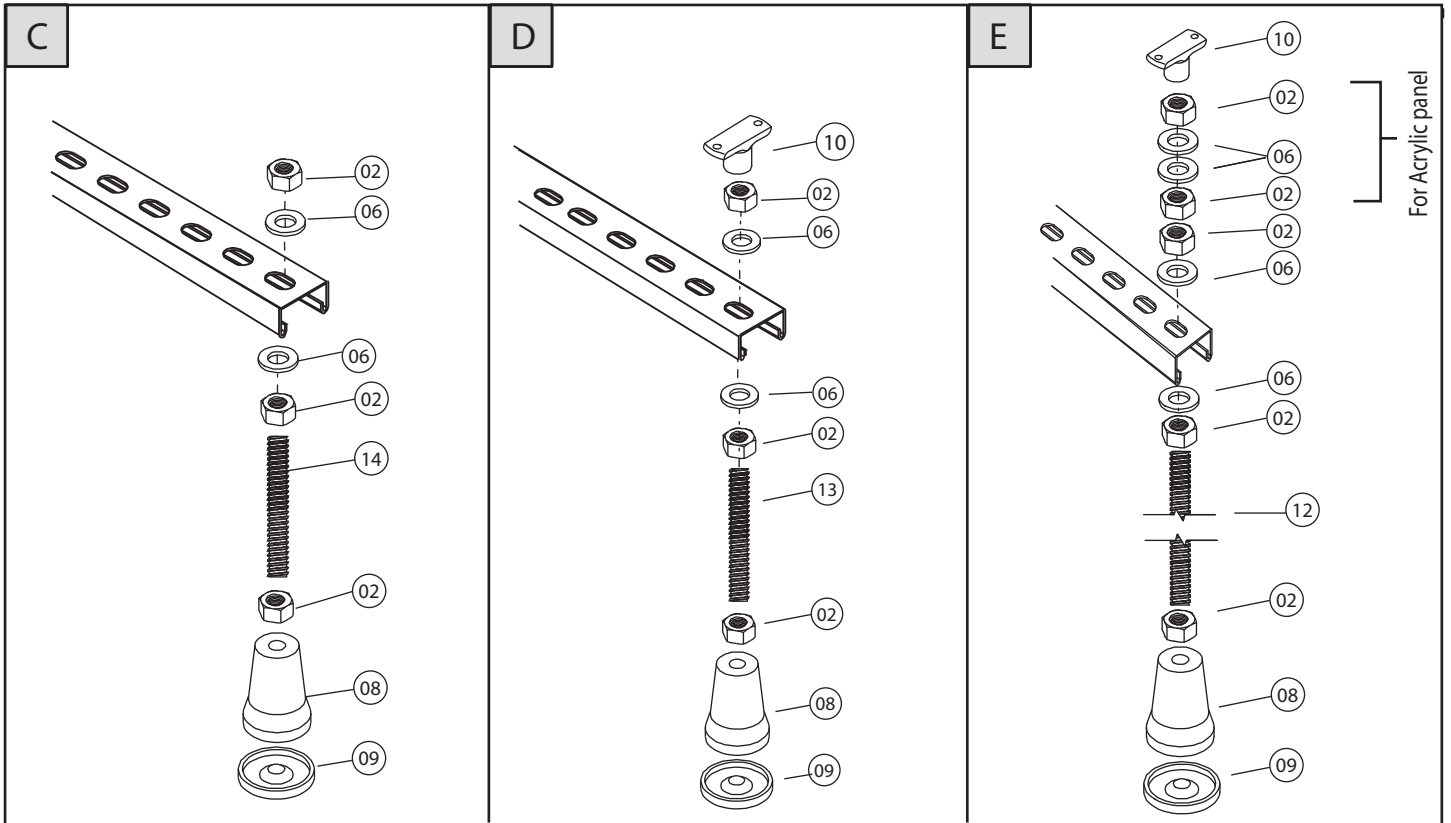

Glue

